

## Classifications of major maintenance / service points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.). These are arranged together as major maintenance and service points and explained in detail.

<<A>> : Indicates that there are essential points for removal or disassembly.

>>A<< : Indicates that there are essential points for installation or reassembly.

### BASIC BRAKE SYSTEM FRONT DISC BRAKE ASSEMBLY

35A-21

#### INSTALLATION SERVICE POINT


##### >>A<< DISC BRAKE ASSEMBLY INSTALLATION

1. To check the brake drag force after mounting the pad, measure the hub torque in the advancing direction using a spring balance with the pad is removed.

#### CAUTION




Do not allow any oil, grease or other contamination to contact the friction surfaces of the pads and brake discs.

2. After re-installing the caliper support to the knuckle, install the pad clips and the pads to the caliper support.

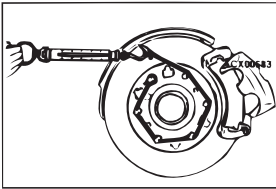

Operating procedures, cautions, etc. on removal, installation, disassembly and reassembly are described

#### LUBRICATION AND SEALING POINTS

 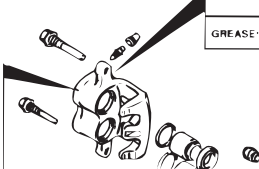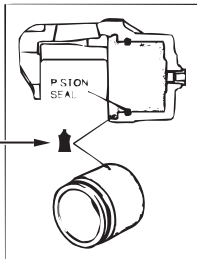

The title of the page (following the page on which the diagram of component parts is presented) indicating the locations of lubrication and sealing procedures.

Indicates (by symbols) where lubrication is necessary.

## Symbols for lubrication, sealants and adhesives

Symbols are used to show the locations for lubrication and for application of sealants and adhesives.

These symbols are included in the diagram of component parts or on the page following the component parts page. The symbols do not always have accompanying text to support that symbol.



: Grease  
(Multi-purpose grease unless there is a brand or type specified)



: Sealant or adhesive



: Brake fluid or automatic transmission fluid



: Engine oil, gear oil or air conditioning compressor oil



: Adhesive tape or butyl rubber tape