

 Apply engine oil to all moving parts before installation.

