


<Cold engine>  
20 ± 1 N·m

<Cold engine>  
11 ± 1 N·m

 Apply engine oil to all moving parts before installation.

