


<RHD>

Blower unit

Set the outside/inside air selection damper lever to the inside air recirculation position.

Heater unit assembly

Set the outside/inside air selection lever to the inside air recirculation position.

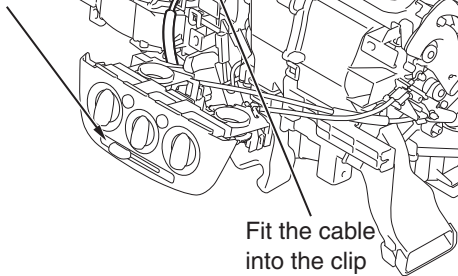

Fit the cable into the clip