

○ <Vehicles with ASC>



The diagram shows a detailed view of a steering wheel sensor assembly. A central circular component, the sensor, is mounted on a bracket. A dashed line indicates the sensor's position relative to the steering wheel hub. A black arrow points from the text label to the sensor. The entire assembly is connected to a steering column shaft.

**Steering
wheel sensor**

ACC04269 AE