 


Cylinder 2, 3
oxygen sensor (front)

This diagram shows the front oxygen sensor connector for cylinders 2 and 3. It features a rectangular connector with four terminals, with a bracket indicating the top two terminals are used for cylinders 2 and 3. A sensor cable is shown connected to the top-right terminal. The background shows a partial view of the engine compartment with a sensor mounted on a cylinder.



Cylinder 2, 3
oxygen sensor
connector (front)

This diagram shows the equipment side connector, which is a square connector with four terminals numbered 1 through 4. A bracket above the connector indicates that terminals 2 and 3 are used for cylinders 2 and 3. The background shows a partial view of the engine compartment with a sensor mounted on a cylinder.

Equipment side
connector