


- ★ 1 Cylinder 1, 4 oxygen sensor (front)
 - ★ 2 Cylinder 2, 3 oxygen sensor (front)
 - ★ 3 Cylinder 1, 4 oxygen sensor (rear)
 - ★ 4 Cylinder 2, 3 oxygen sensor (rear)
 - ★ 5 Camshaft position sensor
 - ★ 6 Engine coolant temperature sensor
 - ★ 7 Crank angle sensor
 - ★ 8 Detonation sensor
 - ★ 9 Throttle position sensor (main)
 - ★ 10 Throttle position sensor (sub)
 - ★ 11 Intake air temperature sensor
 - ★ 12 Air flow sensor
- Power supply
 - Ignition switch-IG
 - Ignition switch-ST
 - Power steering fluid pressure sensor
 - Alternator FR terminal
 - Accelerator pedal position sensor (main)
 - Accelerator pedal position sensor (sub)
 - Inhibitor switch

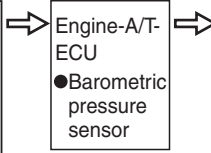

- ☆ 1 Oil control valve
 - ☆ 2 Throttle valve control servo
 - ☆ 3 Injector
 - ☆ 4 EGR valve (Stepper motor)
 - ☆ 5 Purge control solenoid valve
- Engine control relay
 - Fuel pump relay
 - A/C compressor relay
 - Throttle valve control servo relay
 - Ignition coil
 - Fan controller
 - Diagnosis output
 - Alternator G terminal
 - Cylinder 1, 4 oxygen sensor (front) heater
 - Cylinder 2, 3 oxygen sensor (front) heater
 - Cylinder 1, 4 oxygen sensor (rear) heater
 - Cylinder 2, 3 oxygen sensor (rear) heater

