

Classifications of major maintenance / service points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.). These are arranged together as major maintenance and service points and explained in detail.

<<A>> : Indicates that there are essential points for removal or disassembly.

>>A<< : Indicates that there are essential points for installation or reassembly.

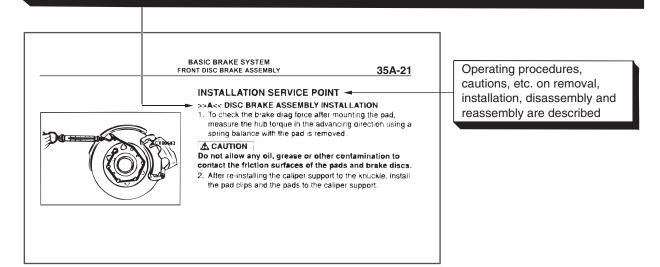

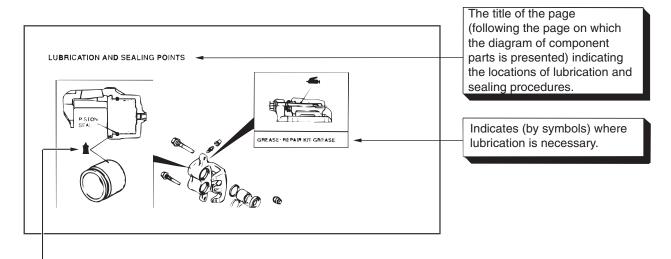

Symbols for lubrication, sealants and adhesives

Symbols are used to show the locations for lubrication and for application of sealants and adhesives. These symbols are included in the diagram of component parts or on the page following the component parts page. The symbols do not always have accompanying text to support that symbol.



: Grease

(Multi-purpose grease unless there is a brand or type specified)



: Sealant or adhesive



: Brake fluid or automatic transmission fluid



 Engine oil, gear oil or air conditioning compressor oil



: Adhesive tape or butyl rubber tape