

Writing status		
ECU Name	Chassis No./VIN	Status
ENG ECU	****-*****	Completed
OSS ECU	-	Not completed
ESL	****-*****	Completed

The Chassis No./VIN is written into blank ECU.
 (The same Chassis No./VIN as Engine ECU is written.)
 Press OK button to execute.

OK button

