

Current Chassis No./VIN

\*\*\*\*\*

New Chassis No./VIN

\*\*\*\*\*

|   |   |   |   |   |   |   |   |   |   |   |   |  |            |       |
|---|---|---|---|---|---|---|---|---|---|---|---|--|------------|-------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |   |   |  |            |       |
| A | B | C | D | E | F | G | H | I | J | K |   |  |            |       |
| L | M | N | O | P | Q | R | S | T | U | V | - |  |            |       |
| W | X | Y | Z |   |   |   |   |   |   |   |   |  |            |       |
|   |   |   |   |   |   |   |   |   |   |   |   |  |            |       |
|   |   |   |   |   |   |   |   |   |   |   |   |  | Back Space | Clear |

OK button

Please input new Chassis No./VIN, and press the OK button.

|   |   |  |   |   |   |  |  |  |  |
|---|---|--|---|---|---|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |
|---|---|--|---|---|---|--|--|--|--|