



Apply engine oil to
 all moving parts
 before installation.