

Engine-ECU

★ 1 Throttle position

★2 Throttle position

★3 Intake air

sensor (sub)

temperature sensor

sensor (main)

Accelerator pedal

Accelerator pedal

Oil pressure switch

position sensor (main)

position sensor (sub)

Alternator FR terminal

☆ 1 Throttle valve

☆ 2 Injector

valve

control servo

★ 3 Oil feeder control

Ignition coil

Starter relay

Throttle valve

Engine control relay

control servo relay

Fuel pump relay

*3 Oil feeder control valve

*7 Camshaft position sensor

From fuel pump

*2 Injector

*4 Purge control solenoid valve

temperature sensor

*6 Detonation sensor

*8 Crank angle sensor

*11 Brake booster pressure sensor

ACE00509AB