

Engine-ECU Connector

1	2	3	4							5	6	7	8	
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25	26	27	28	29			30	31	32	33		34	35

41	42	43								44	45	46
47	48	49	50	51	52	53	54	55	56	57		
58	59		60	61	62	63		64	65	66		

71	72	73	74							75	76	77
78	79	80	81	82	83	84	85	86	87	88	89	
90	91		92	93	94		95	96		97	98	