

Engine-ECU Connectors

C-218

1	2		3	4						5	6		7	8
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25		26	27	28	29		30	31	32	33		34	35

C-217

41	42	43								44	45	46
47	48	49	50	51	52	53	54	55	56	57		
58	59		60	61	62	63		64	65	66		

C-216

71	72	73	74							75	76	77
78	79	80	81	82	83	84	85	86	87	88	89	
90	91		92	93	94		95	96		97	98	