


- ★ 1 Throttle position sensor (main)
 - ★ 2 Throttle position sensor (sub)
 - ★ 3 Intake air temperature sensor
 - ★ 4 Manifold absolute pressure sensor
 - ★ 5 Engine coolant temperature sensor
 - ★ 6 Detonation sensor
 - ★ 7 Camshaft position sensor
 - ★ 8 Crank angle sensor
 - ★ 9 Oxygen sensor (front)
 - ★ 10 Oxygen sensor (rear)
 - ★ 11 Brake booster pressure sensor

- Accelerator pedal position sensor (main)
 - Accelerator pedal position sensor (sub)
 - Oil pressure switch
 - Alternator FR terminal
 - Alternator L terminal
 - Battery current sensor (LIN)*
 - A/C pressure sensor
 - Fin thermo sensor
 - Blower fan signal
<Manual A/C>
 - Brake monitoring switch
<CVT>
 - Ignition switch-IG
 - Ignition switch-ST
 - Power supply
 - CAN communication (input signal)

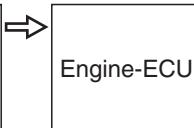

- ★ 1 Throttle valve control servo
 - ★ 2 Injector
 - ★ 3 Oil feeder control valve
 - ★ 4 Purge control solenoid valve

- Ignition coil
 - Engine control relay
 - Fuel pump relay
 - Starter relay
 - Throttle valve
 - control servo relay
 - Alternator G terminal
 - Oxygen sensor
(front) heater
 - Oxygen sensor
(rear) heater
 - A/C compressor relay
 - Fan motor relay (low)
 - Fan motor relay (high)
<CVT>
 - CAN communication
(output signal)

*: Vehicles for Argentina

