 


SRS-ECU connector



21	22	23					24	25	26	
27	28	29	30	31	32	33	34	35	36	37
38	39	40	41	42	43	44	45	46	47	48