

<RHD>

**1**

Set the outside/inside air selection damper lever to the inside air recirculation position.

Fit the cable into the clip

Blower unit

Heater unit assembly

**2**

Set the outside/inside air selection lever to the inside air recirculation position.

