


**1**

Set the outside/inside air selection damper lever to the inside air recirculation position.

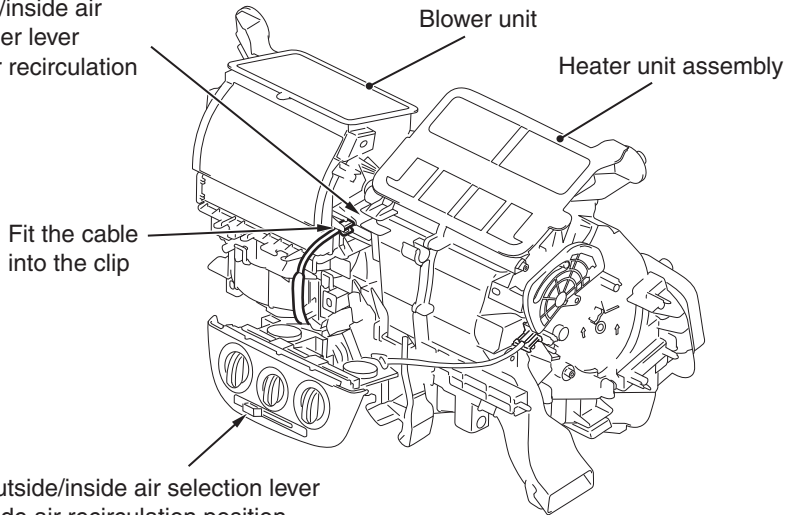

**2**

Set the outside/inside air selection lever to the inside air recirculation position.