

**D**



Engine coolant temperature sensor

The diagram shows a top-down view of an engine compartment. A black arrow points to a sensor located on the lower left side of the engine block. To the right of the engine, a large, rectangular, ribbed component is labeled as the 'Canister'. Various hoses, wires, and mechanical parts are visible throughout the engine bay.

Canister

**ACB04476 AB**