

Chassis No./VIN Writing

Chassis No./VIN (Engine ECU)

Chassis No./VIN currently written in Engine ECU displayed.
Write the number displayed on the screen in Immobilizer KOS/ECU.

OK button

Press the OK button to execute.

