




 Apply engine oil to
 all moving parts
 before installation.


 5.0 N·m, 20 N·m then +90°