



Apply engine oil to
all moving parts
before installation.



26.5 ± 2.0 N·m then +45°