



4

3

2

1

5.0 N·m, 20 N·m then +90°

Apply engine oil to all moving parts before installation.