



- ★ 1 Air flow sensor
 - ★ 2 Intake air temperature sensor
 - ★ 3 Throttle position sensor (main)
 - ★ 4 Throttle position sensor (sub)
 - ★ 5 Manifold absolute pressure sensor
 - ★ 6 Inlet camshaft position sensor
 - ★ 7 Engine coolant temperature sensor
 - ★ 8 Detonation sensor
 - ★ 9 Crank angle sensor
 - ★ 10 Oxygen sensor (front)
 - ★ 11 Oxygen sensor (rear)*
- Power supply
 - Ignition switch-IG
 - Ignition switch-ST
 - Accelerator pedal position sensor (main)
 - Accelerator pedal position sensor (sub)
 - Engine oil pressure switch
 - Alternator FR terminal
 - Alternator L terminal
 - CAN communication (input signal)

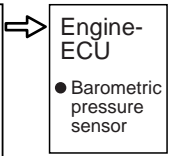

- ★ 1 Injector
 - ★ 2 Inlet oil feeder control valve
 - ★ 3 Throttle valve control servo
 - ★ 4 Purge control solenoid valve
- Ignition coil
 - Engine control relay
 - Fuel pump relay
 - Starter relay
 - Throttle valve control servo relay
 - A/C compressor relay
 - Alternator G terminal
 - Oxygen sensor (front) heater
 - Oxygen sensor (rear) heater*
 - CAN communication (input signal)

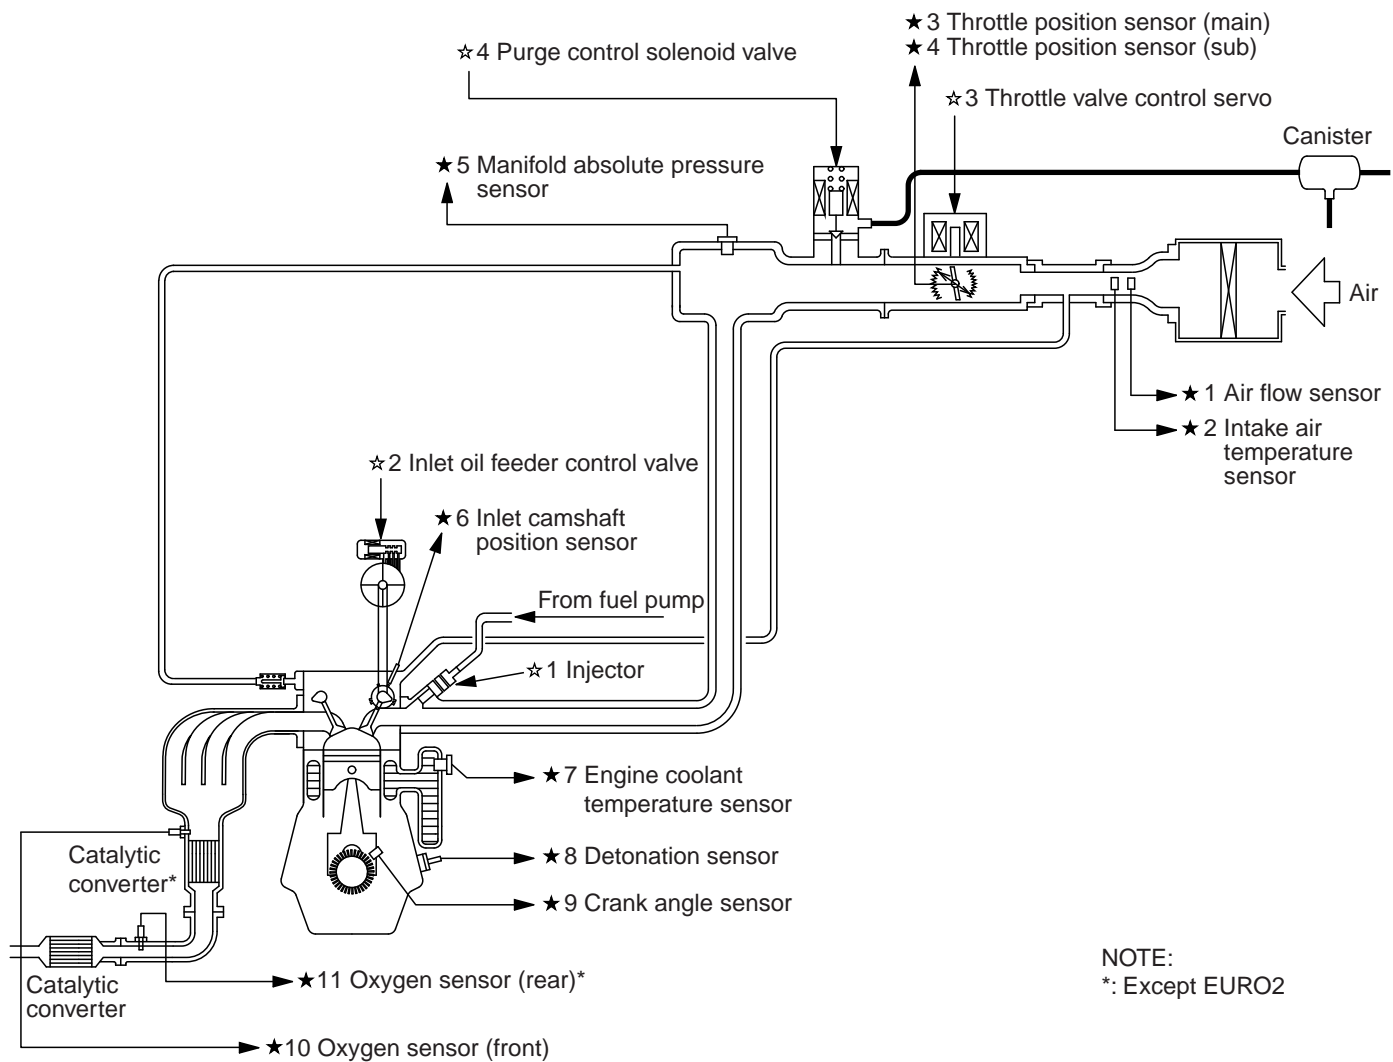

NOTE:
*: Except EURO2