



Air flow sensor  
Intake air temperature sensor  
Manifold absolute pressure sensor  
Engine coolant temperature sensor  
Throttle position sensor  
Crank angle sensor

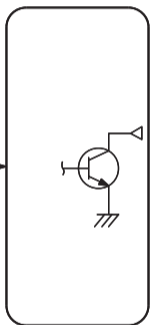


Engine-ECU

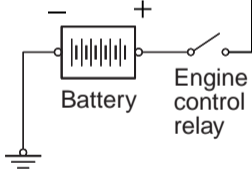

Battery

Engine control relay

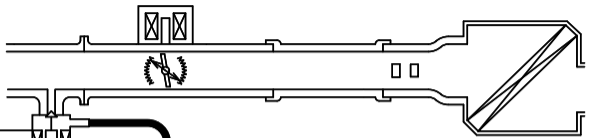

Purge control solenoid valve

Canister

From fuel tank