

 Apply automatic transmission fluid to all moving parts before installation.

