


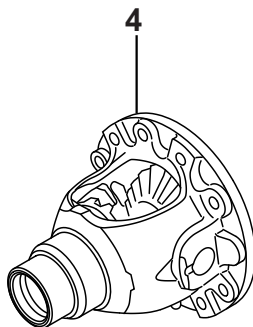

Apply automatic transmission fluid to all moving parts before installation.

**N 3**



**144 N·m**



**N 2**

