


G

<4B1>



**Detonation
sensor**

The diagram shows a cross-section of an engine's internal components. A detonation sensor is mounted on the cylinder head. It consists of a cylindrical housing with a central electrode and a ground electrode. The sensor is connected to a multi-pin electrical connector. A black arrow points to the sensor housing.

AC605662AZ