



RADIO AND CD PLAYER (C-109)

J/C(1) (RADIO AND CD PLAYER)

AUDIO AMPLIFIER

C-12

MU801515

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-109

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

C-129

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

D-124

(MU801859)

1	2	3	4	5	6
7	8	9	10	11	12

D-125

(MU801859)

1	2	3	4	5	6
7	8	9	10	11	12

D-126

MU801453

41	42	43	44	45	46		
47	48	49	50	51	52	53	54

D-127

MU801586

21	22	23	24	25	26	27
28	29	30	31	32	33	34

D-128

MU801455

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

Wire colour code

B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
 BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver