

NOTE
 * 1: VEHICLES WITHOUT KOS
 * 2: VEHICLES WITH KOS
 * 3: LHD
 * 4: RHD

* 5: -ABS-ECU
 -ACC/FCM-ECU
 -ASC-ECU
 -A/T CONTROL RELAY
 -COLUMN SWITCH
 -COMBINATION METER
 -CVT CONTROL RELAY
 -EPS-ECU
 -HAZARD INDICATOR ASSEMBLY

-HEATED SEAT RELAY
 -HEATER CONTROLLER ASSEMBLY (A/C-ECU)
 -KOS-ECU
 -SELECTOR LEVER ASSEMBLY
 -STEERING WHEEL ASSEMBLY
 -SUNROOF MOTOR ASSEMBLY

* 6: -4WD SWITCH
 -ASC OFF SWITCH
 -DOWNLIGHT
 -ELECTRIC TAILGATE SWITCH
 -FCM SWITCH
 -HAZARD INDICATOR ASSEMBLY
 -HEADLAMP MANUVAL LEVELLING SWITCH

-HEATED SEAT SWITCH
 -METER
 -METER INFORMATION SWITCH
 -RADIO AND CD PLAYER
 -SPARE CONNECTOR (FOR AUDIO)

* 7: -4WD SWITCH
 -ASC OFF SWITCH
 -DOWNLIGHT
 -ELECTRIC TAILGATE SWITCH
 -FCM SWITCH
 -HAZARD INDICATOR ASSEMBLY
 -HEADLAMP MANUVAL LEVELLING SWITCH
 -HEATED SEAT SWITCH
 -METER INFORMATION SWITCH

