

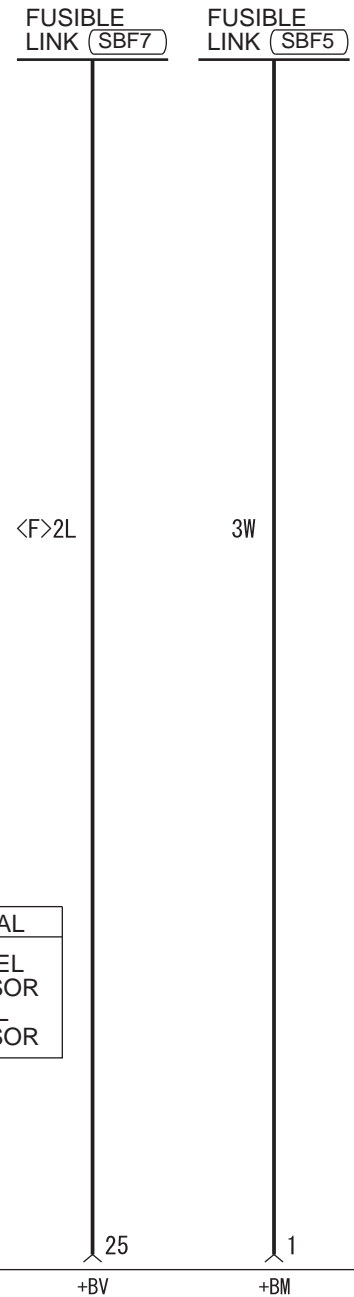
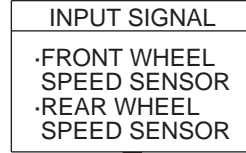


- NOTE
- *1: VEHICLES WITHOUT KOS
 - *2: VEHICLES WITH KOS
 - *3: A/T CONTROL RELAY
 - COLUMN SWITCH
 - CORNER SENSOR/BACK SENSOR-ECU
 - EPS-ECU
 - HAZARD INDICATOR ASSEMBLY
 - HEATED SEAT RELAY
 - HEATER CONTROLLER ASSEMBLY (A/C-ECU)
 - KOS-ECU
 - SELECTOR LEVER ASSEMBLY
 - SONAR SWITCH
 - SUNROOF MOTOR ASSEMBLY

 
 
 
 
 
 

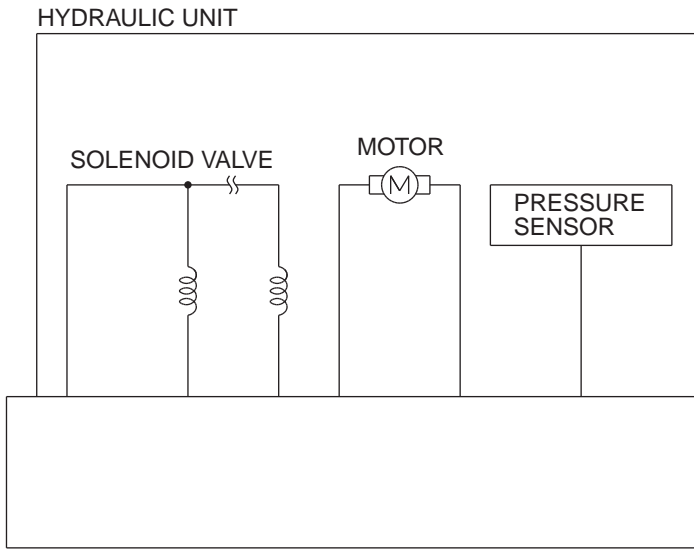


IGNITION SWITCH (IG1) OR OSS-ECU (IG1)

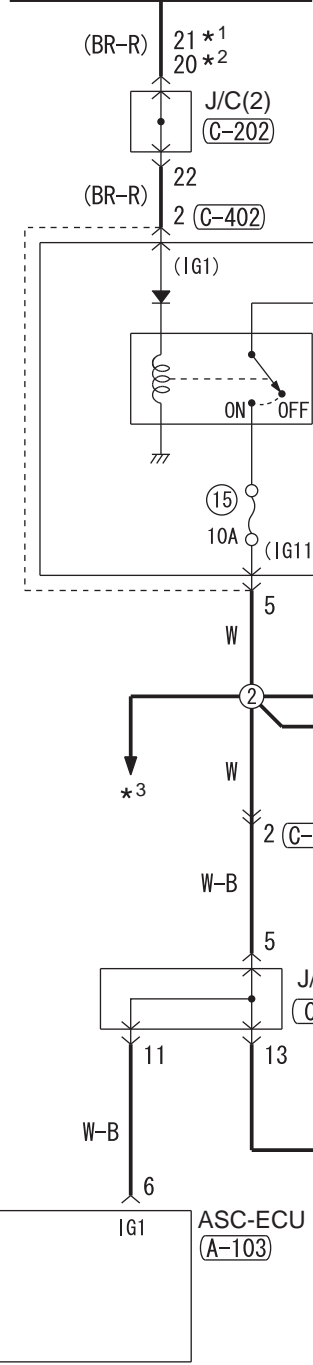

FUSIBLE LINK ②

RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE

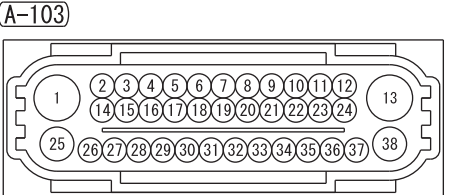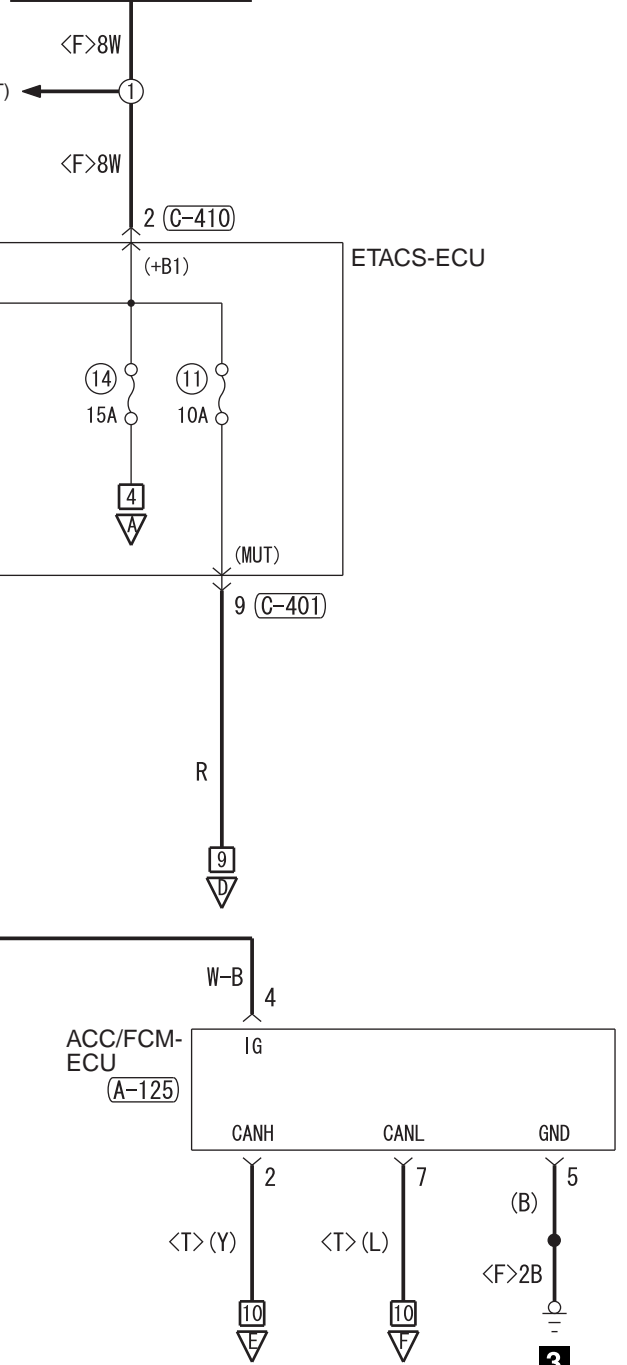

Wire colour code

B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue

BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver