
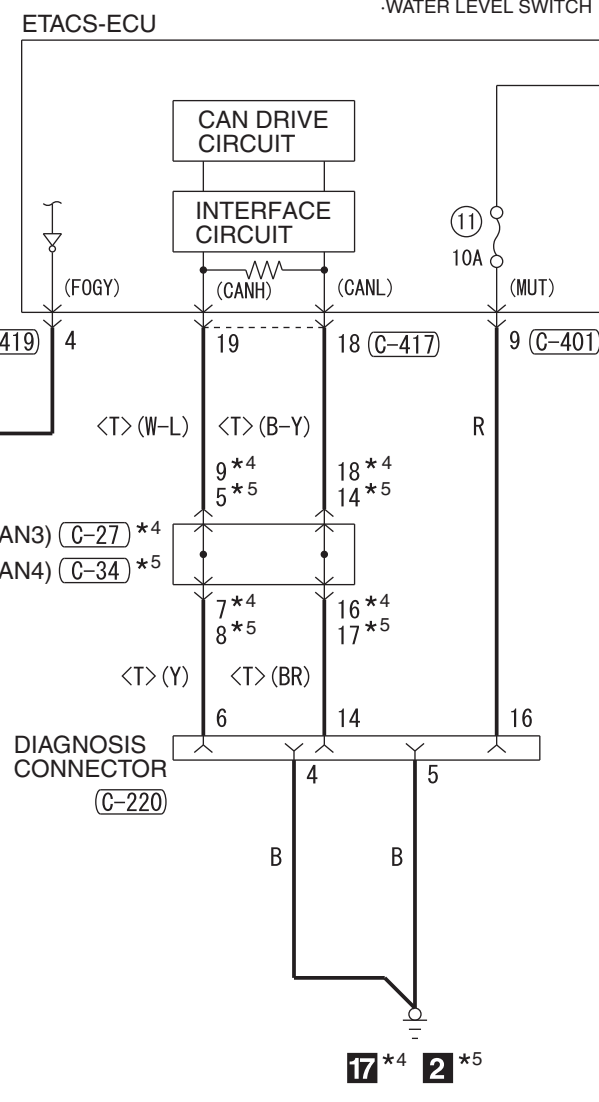


1

FUSIBLE LINK ④ <4B1, 6B3>  
FUSIBLE LINK ⑥ <4N1>

- NOTE
- \*1 : VEHICLES WITHOUT KOS
  - \*2 : VEHICLES WITH KOS
  - \*3 : VEHICLES WITH AUTO LAMP
  - \*4 : LHD
  - \*5 : RHD
  - \*6 : ABS-ECU
- |                                |                              |                                |
|--------------------------------|------------------------------|--------------------------------|
| ·ACC/FCM-ECU                   | ·HAZARD INDICATOR ASSEMBLY   | ·SECONDARY PULLEY SPEED SENSOR |
| ·ASC-ECU                       | ·HEATED SEAT RELAY           | ·SELECTOR LEVER ASSEMBLY       |
| ·A/T CONTROL RELAY             | ·HEATER CONTROLLER ASSEMBLY  | ·SONAR SWITCH                  |
| ·COMBINATION METER             | ·A/C-ECU ASSEMBLY            | ·STEERING WHEEL SENSOR         |
| ·CORNER SENSOR/BACK SENSOR-ECU | ·KOS-ECU                     | ·SUNROOF MOTOR ASSEMBLY        |
| ·CVT-ECU                       | ·LDW-ECU                     | ·TURBINE SPEED SENSOR          |
| ·EPS-ECU                       | ·PRIMARY PULLEY SPEED SENSOR | ·WATER LEVEL SWITCH            |
|                                | ·PTC HEATER RELAY            |                                |

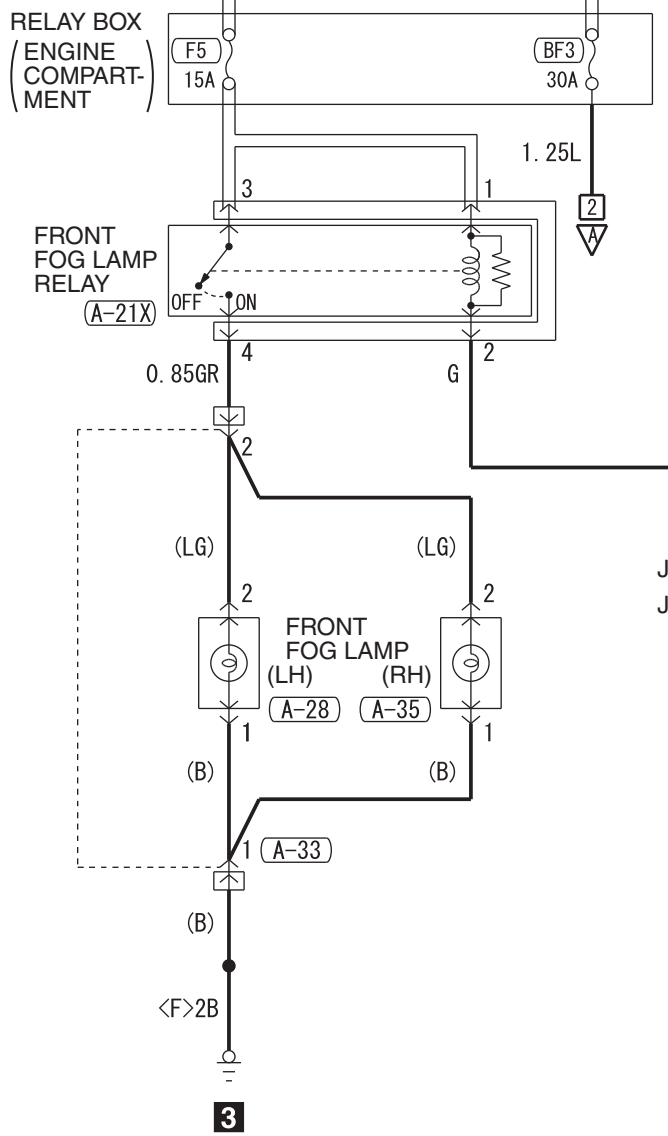

2

RELAY BOX (FUSE (BF3))  
IGNITION SWITCH (IG1) OR OSS-ECU (IG1)  
FUSIBLE LINK ② <4B1, 6B3>  
FUSIBLE LINK ⑫ <4N1>

