



FUSIBLE LINK ④ <4B1, 6B3>
FUSIBLE LINK ⑥ <4N1>

RELAY BOX
(ENGINE
COMPARTMENT)

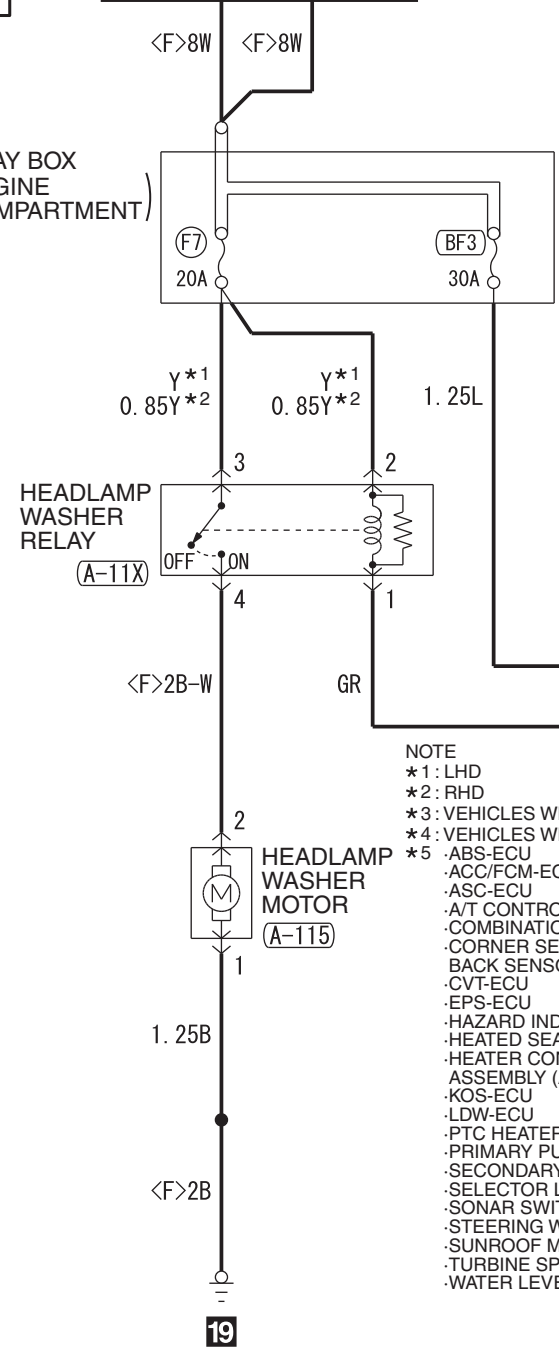

- NOTE
- *1: LHD
 - *2: RHD
 - *3: VEHICLES WITHOUT KOS
 - *4: VEHICLES WITH KOS
 - *5:
 - ABS-ECU
 - ACC/FCM-ECU
 - ASC-ECU
 - A/T CONTROL RELAY
 - COMBINATION METER
 - CORNER SENSOR / BACK SENSOR-ECU
 - CVT-ECU
 - EPS-ECU
 - HAZARD INDICATOR ASSEMBLY
 - HEATED SEAT RELAY
 - HEATER CONTROLLER ASSEMBLY (A/C-ECU)
 - KOS-ECU
 - LDW-ECU
 - PTC HEATER RELAY
 - PRIMARY PULLEY SPEED SENSOR
 - SECONDARY PULLEY SPEED SENSOR
 - SELECTOR LEVER ASSEMBLY
 - SONAR SWITCH
 - STEERING WHEEL SENSOR
 - SUNROOF MOTOR ASSEMBLY
 - TURBINE SPEED SENSOR
 - WATER LEVEL SWITCH

IGNITION SWITCH (IG1)
OR OSS-ECU (IG1)
FUSIBLE LINK ② <4B1, 6B3>
FUSIBLE LINK ⑩ <4N1>

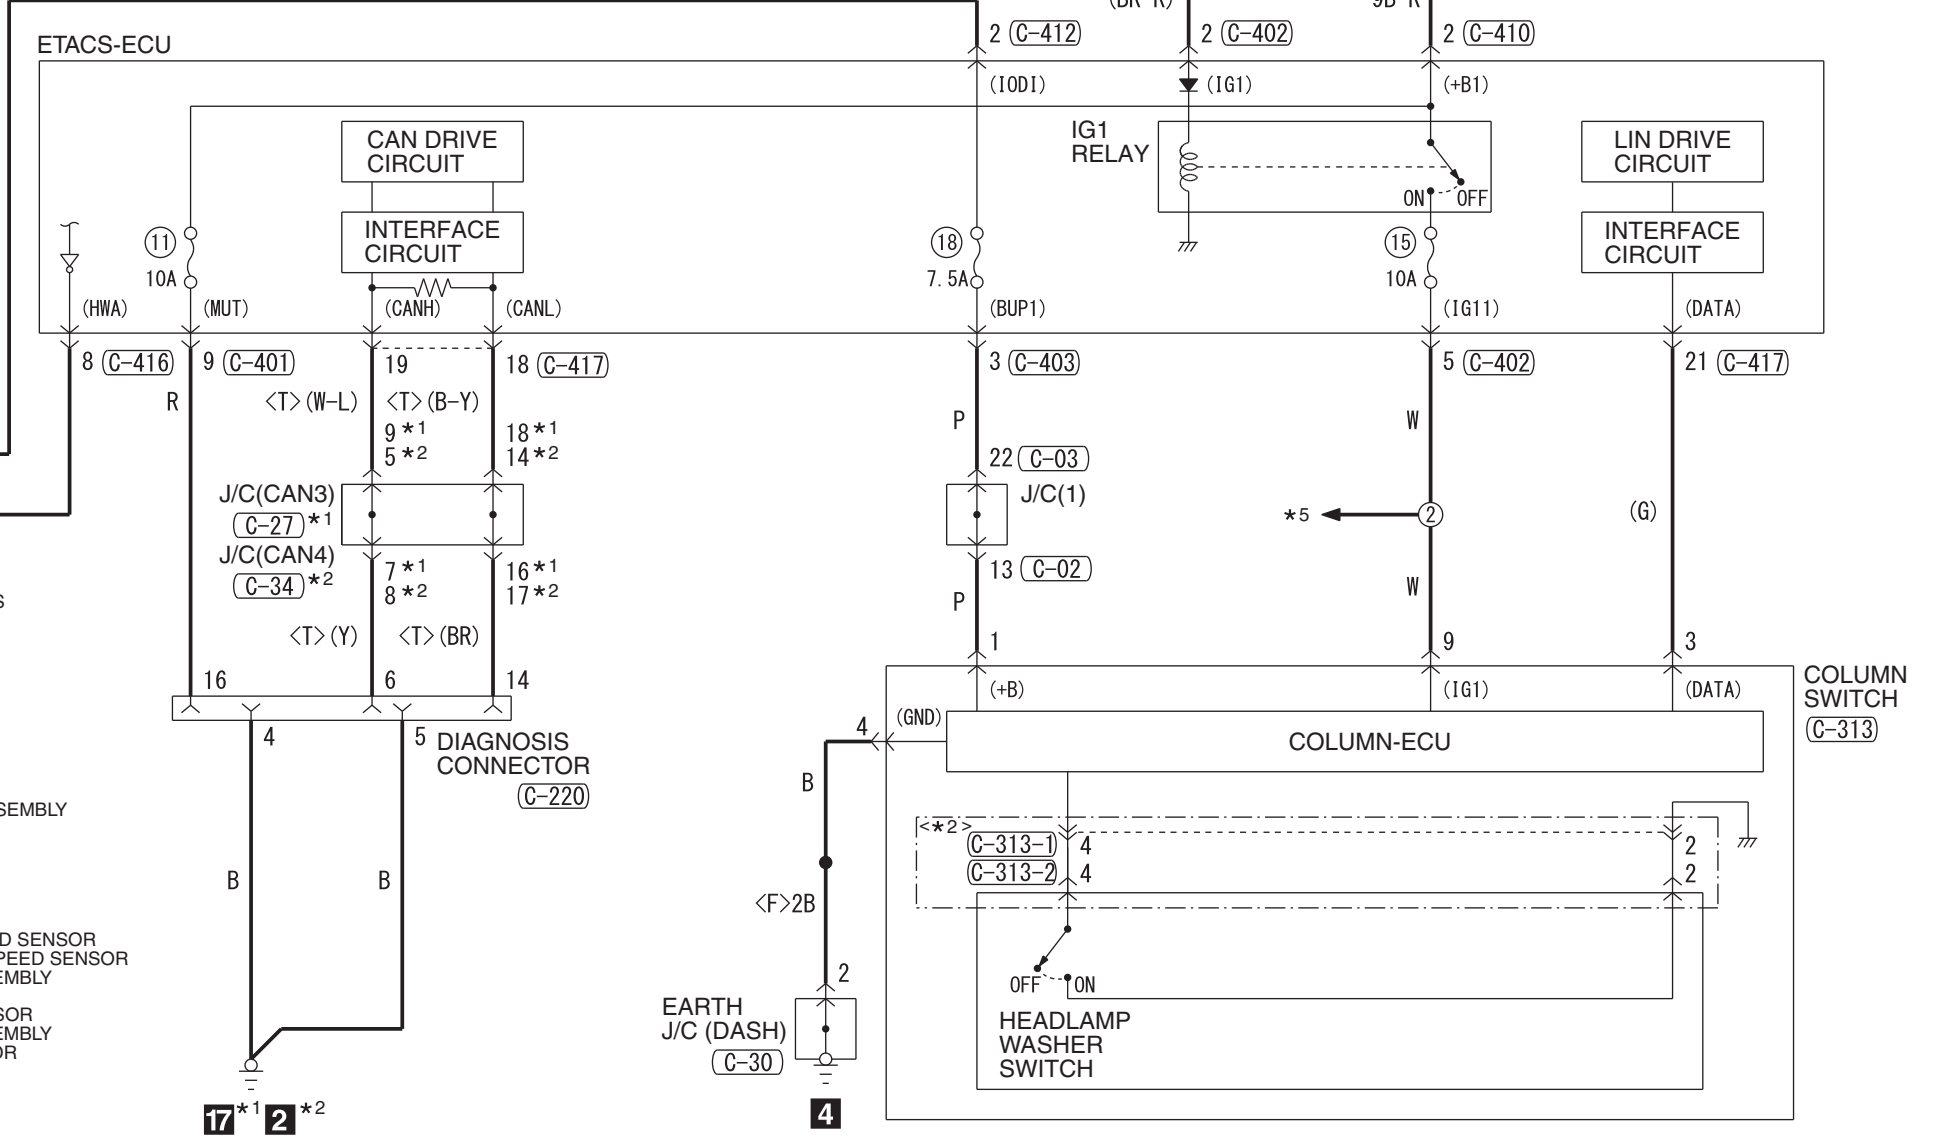

EARTH
J/C (DASH)
(C-30)

COLUMN
SWITCH
(C-313)

