


FUSIBLE LINK ② <4B1, 6B3>
FUSIBLE LINK ⑫ <4N1>



ENGINE-ECU (B-07) *3
(B-28) *4

NOTE
*3 : 4B1, 6B3
*4 : 4N1
*5 : VEHICLES WITHOUT ASC
*6 : VEHICLES WITH ASC

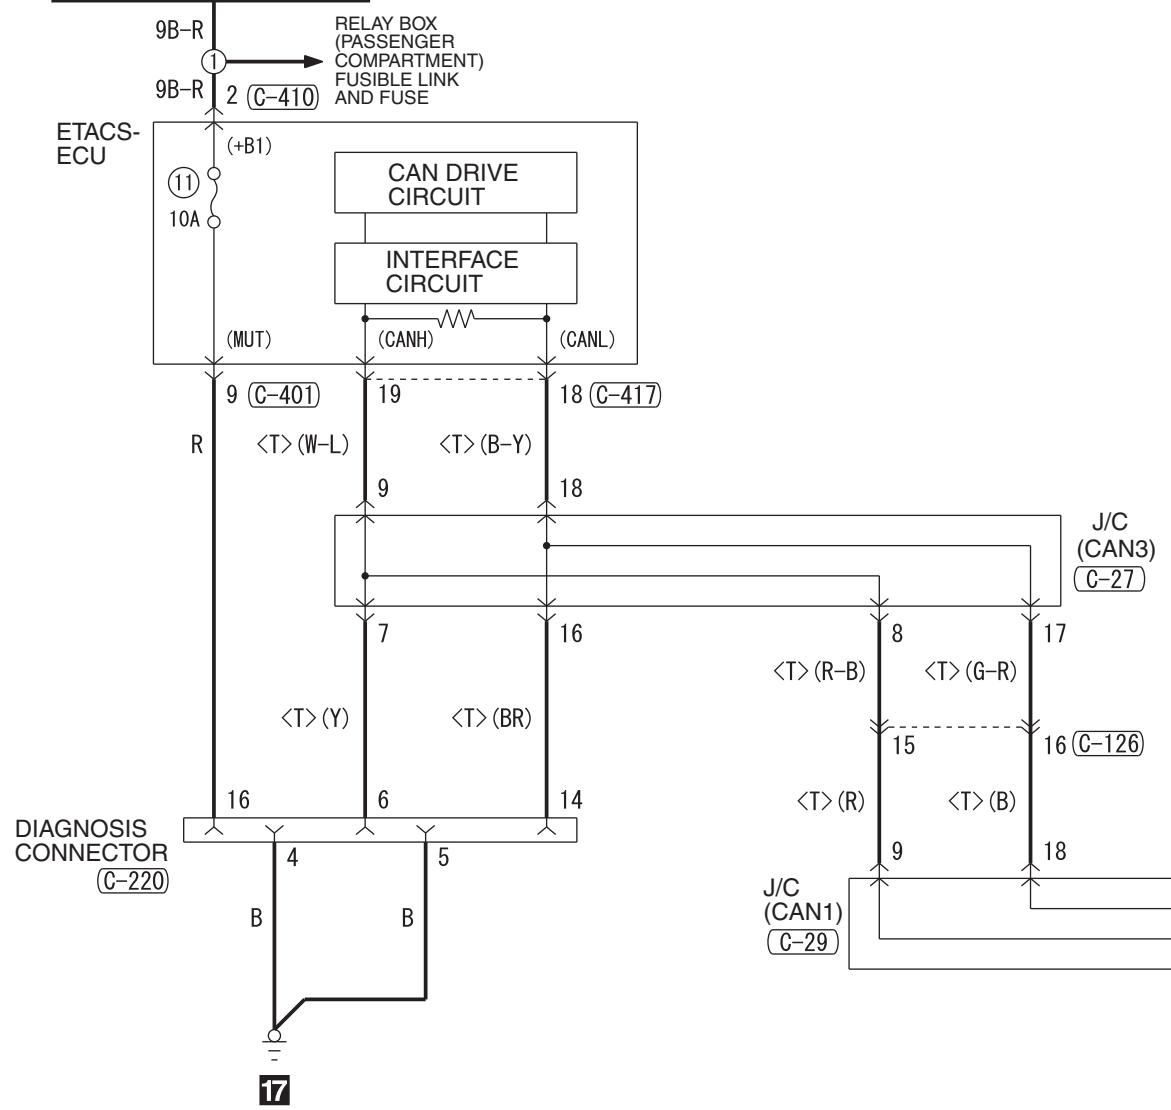