

NOTE
 * 1: VEHICLES WITHOUT KOS
 * 2: VEHICLES WITH KOS
 * 3: LHD
 * 4: RHD

- * 5: -ABS-ECU
 -ACC/FCM-ECU
 -ASC-ECU
 -A/T CONTROL RELAY
 -COLUMN SWITCH
 -COMBINATION METER
 -CVT-ECU
 -EPS-ECU
 -HAZARD INDICATOR ASSEMBLY
 -HEATED SEAT RELAY
 -HEATER CONTROLLER ASSEMBLY (A/C-ECU)
 -LDW-ECU

- PRIMARY PULLEY SPEED SENSOR
 -PTC HEATER RELAY
 -SECONDARY PULLEY SPEED SENSOR
 -STEERING WHEEL SENSOR
 -SUNROOF MOTOR ASSEMBLY
 -TURBINE SPEED SENSOR
 -WATER LEVEL SWITCH

- * 6: -4WD SWITCH
 -ASC OFF SWITCH
 -DOWNLIGHT
 -ELECTRIC TAILGATE SWITCH
 -FCM SWITCH
 -HAZARD INDICATOR ASSEMBLY
 -HEADLAMP MANUAL LEVELLING SWITCH
 -HEATED SEAT SWITCH
 -LDW SWITCH

- METER INFORMATION SWITCH
 -MULTIVISION DISPLAY
 -RADIO AND CD PLAYER
 -S-AWC DRIVE MODE-SELECTOR
 -SPARE CONNECTOR (FOR AUDIO)

- * 7: -4WD SWITCH
 -ASC OFF SWITCH
 -DOWNLIGHT
 -ELECTRIC TAILGATE SWITCH
 -FCM SWITCH
 -HAZARD INDICATOR ASSEMBLY
 -HEADLAMP MANUAL LEVELLING SWITCH
 -HEATED SEAT SWITCH
 -LDW SWITCH
 -METER INFORMATION SWITCH
 -S-AWC DRIVE MODE-SELECTOR

