



- NOTE
- *1 : VEHICLES WITHOUT KOS
 - *2 : VEHICLES WITH KOS
 - *3 : COLUMN SWITCH
CORNER SENSOR/
BACK SENSOR-ECU
HAZARD INDICATOR
ASSEMBLY
HEATED SEAT RELAY
HEATER CONTROLLER
ASSEMBLY (A/C-ECU)
KOS-ECU
LDW-ECU
SELECTOR LEVER
ASSEMBLY
SONAR SWITCH
SUNROOF MOTOR
ASSEMBLY

FUSIBLE LINK (SBF7)

FUSIBLE LINK (SBF5)

<F>2L


3W

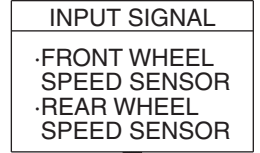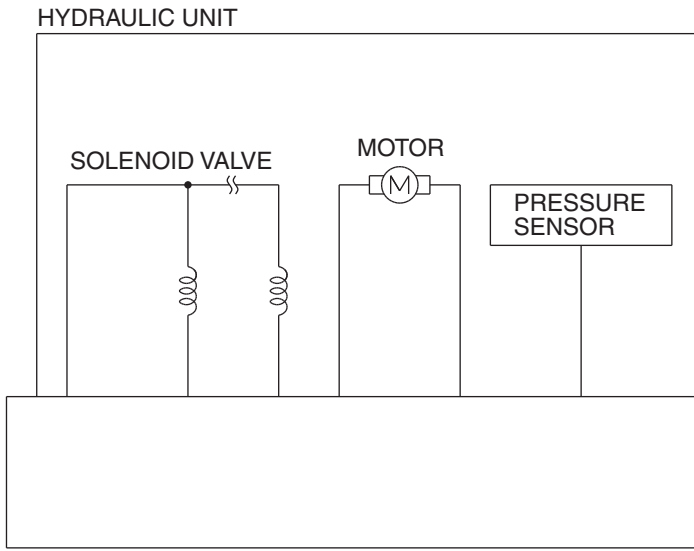

+BV









+BM

IGNITION SWITCH (IG1) OR OSS-ECU (IG1)

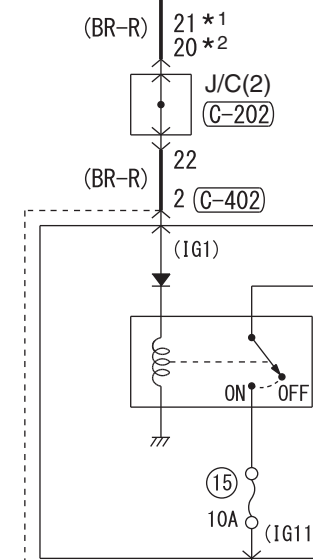

FUSIBLE LINK ②

RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE

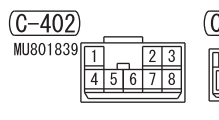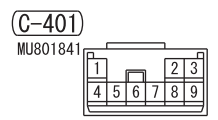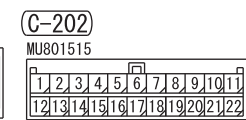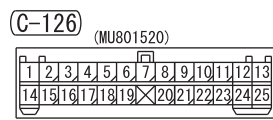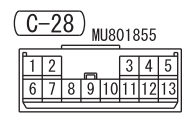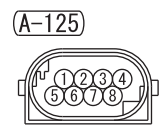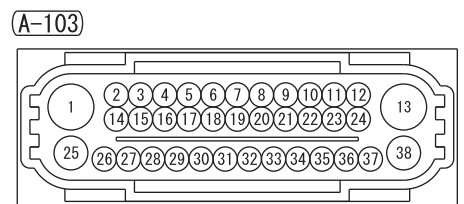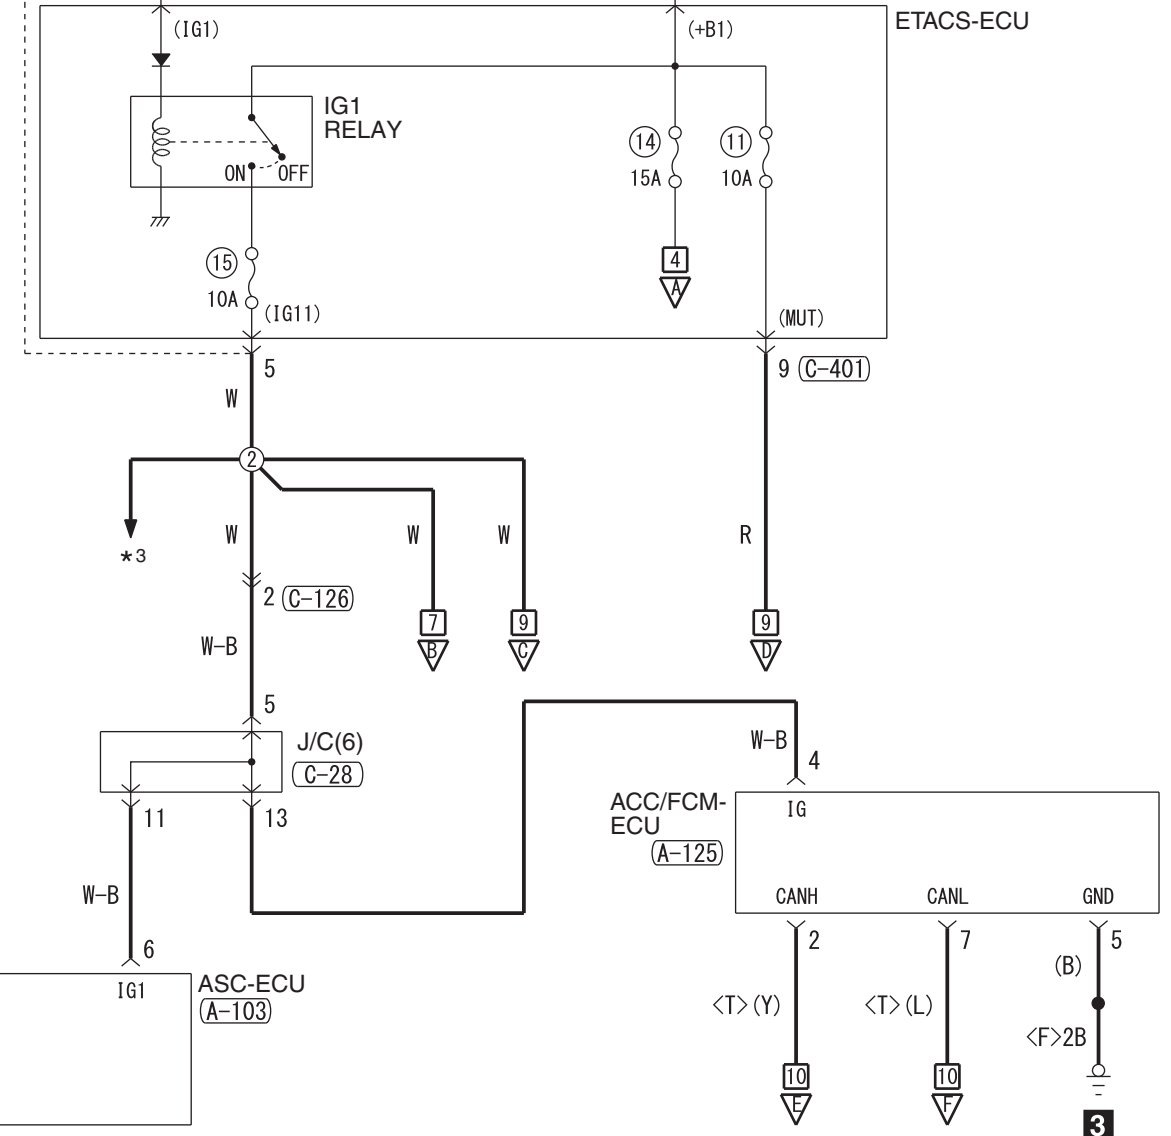

Wire colour code

B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown

O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige