


NOTE  
 \*1: VEHICLES WITHOUT KOS  
 \*2: VEHICLES WITH KOS  
 \*3: COLUMN SWITCH  
 ·CORNER SENSOR/  
 ·BACK SENSOR-ECU  
 ·HAZARD INDICATOR  
 ASSEMBLY  
 ·HEATED SEAT RELAY  
 ·HEATER CONTROLLER  
 ASSEMBLY (A/C-ECU)  
 ·KOS-ECU  
 ·LDW-ECU  
 ·SELECTOR LEVER  
 ASSEMBLY  
 ·SONAR SWITCH  
 ·SUNROOF MOTOR ASSEMBLY

FUSIBLE LINK (SBF7)  
 FUSIBLE LINK (SBF5)




<F>2L  
 3W

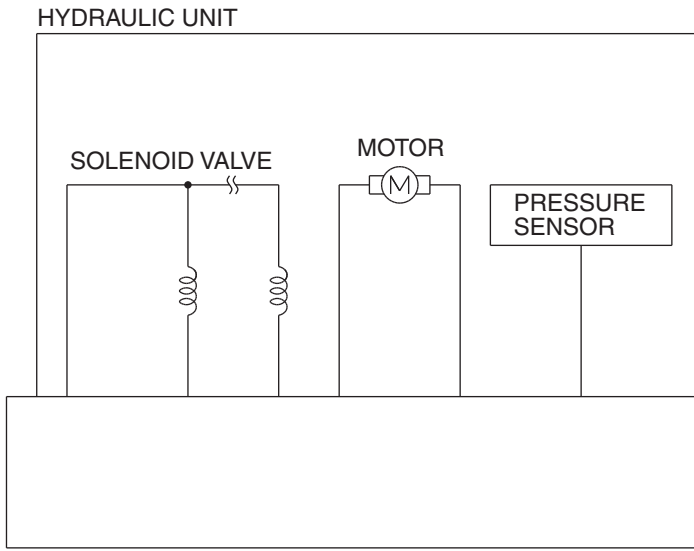

INPUT SIGNAL  
 ·FRONT WHEEL SPEED SENSOR  
 ·REAR WHEEL SPEED SENSOR








+BV  
 +BM

IGNITION SWITCH (IG1)  
 OR OSS-ECU (IG1)

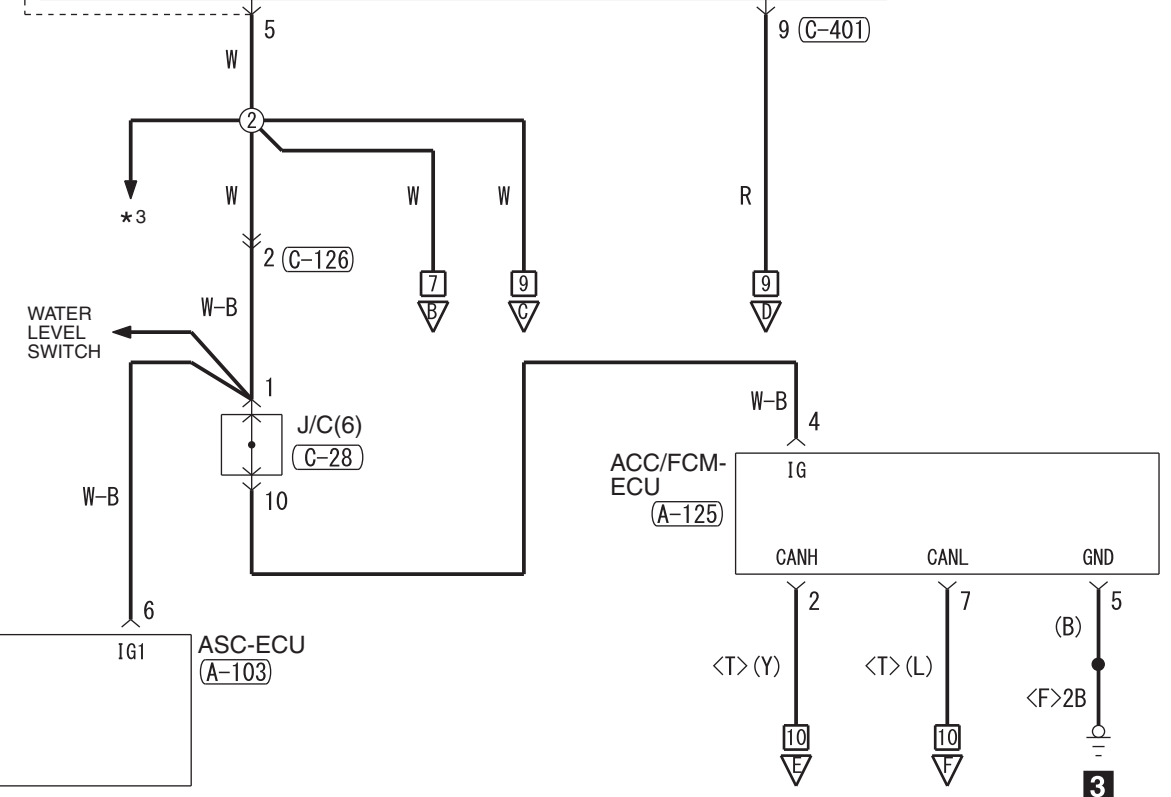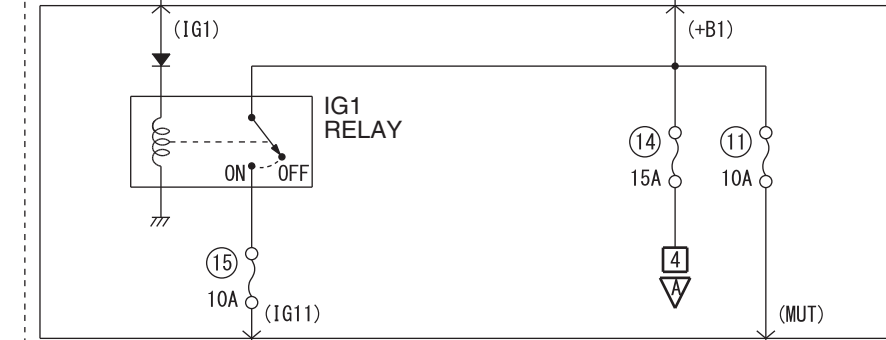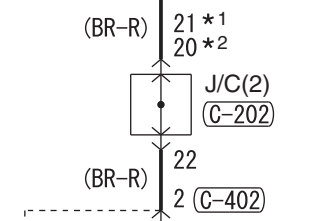

FUSIBLE LINK (12)

RELAY BOX  
 (PASSENGER  
 COMPARTMENT)  
 FUSIBLE LINK  
 AND FUSE

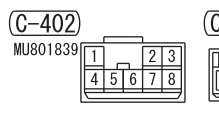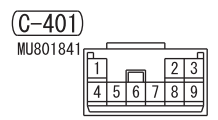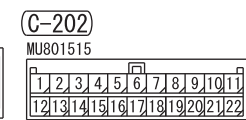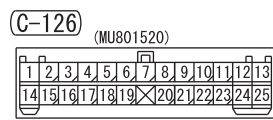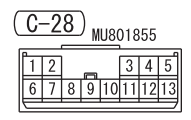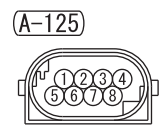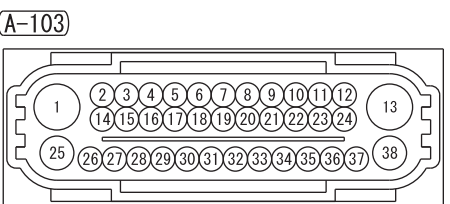

Wire colour code  
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown  
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige