



IGNITION SWITCH (IG1) OR OSS-ECU (IG1) FUSIBLE LINK (2) <4B1, 6B3> FUSIBLE LINK (12) <4N1>

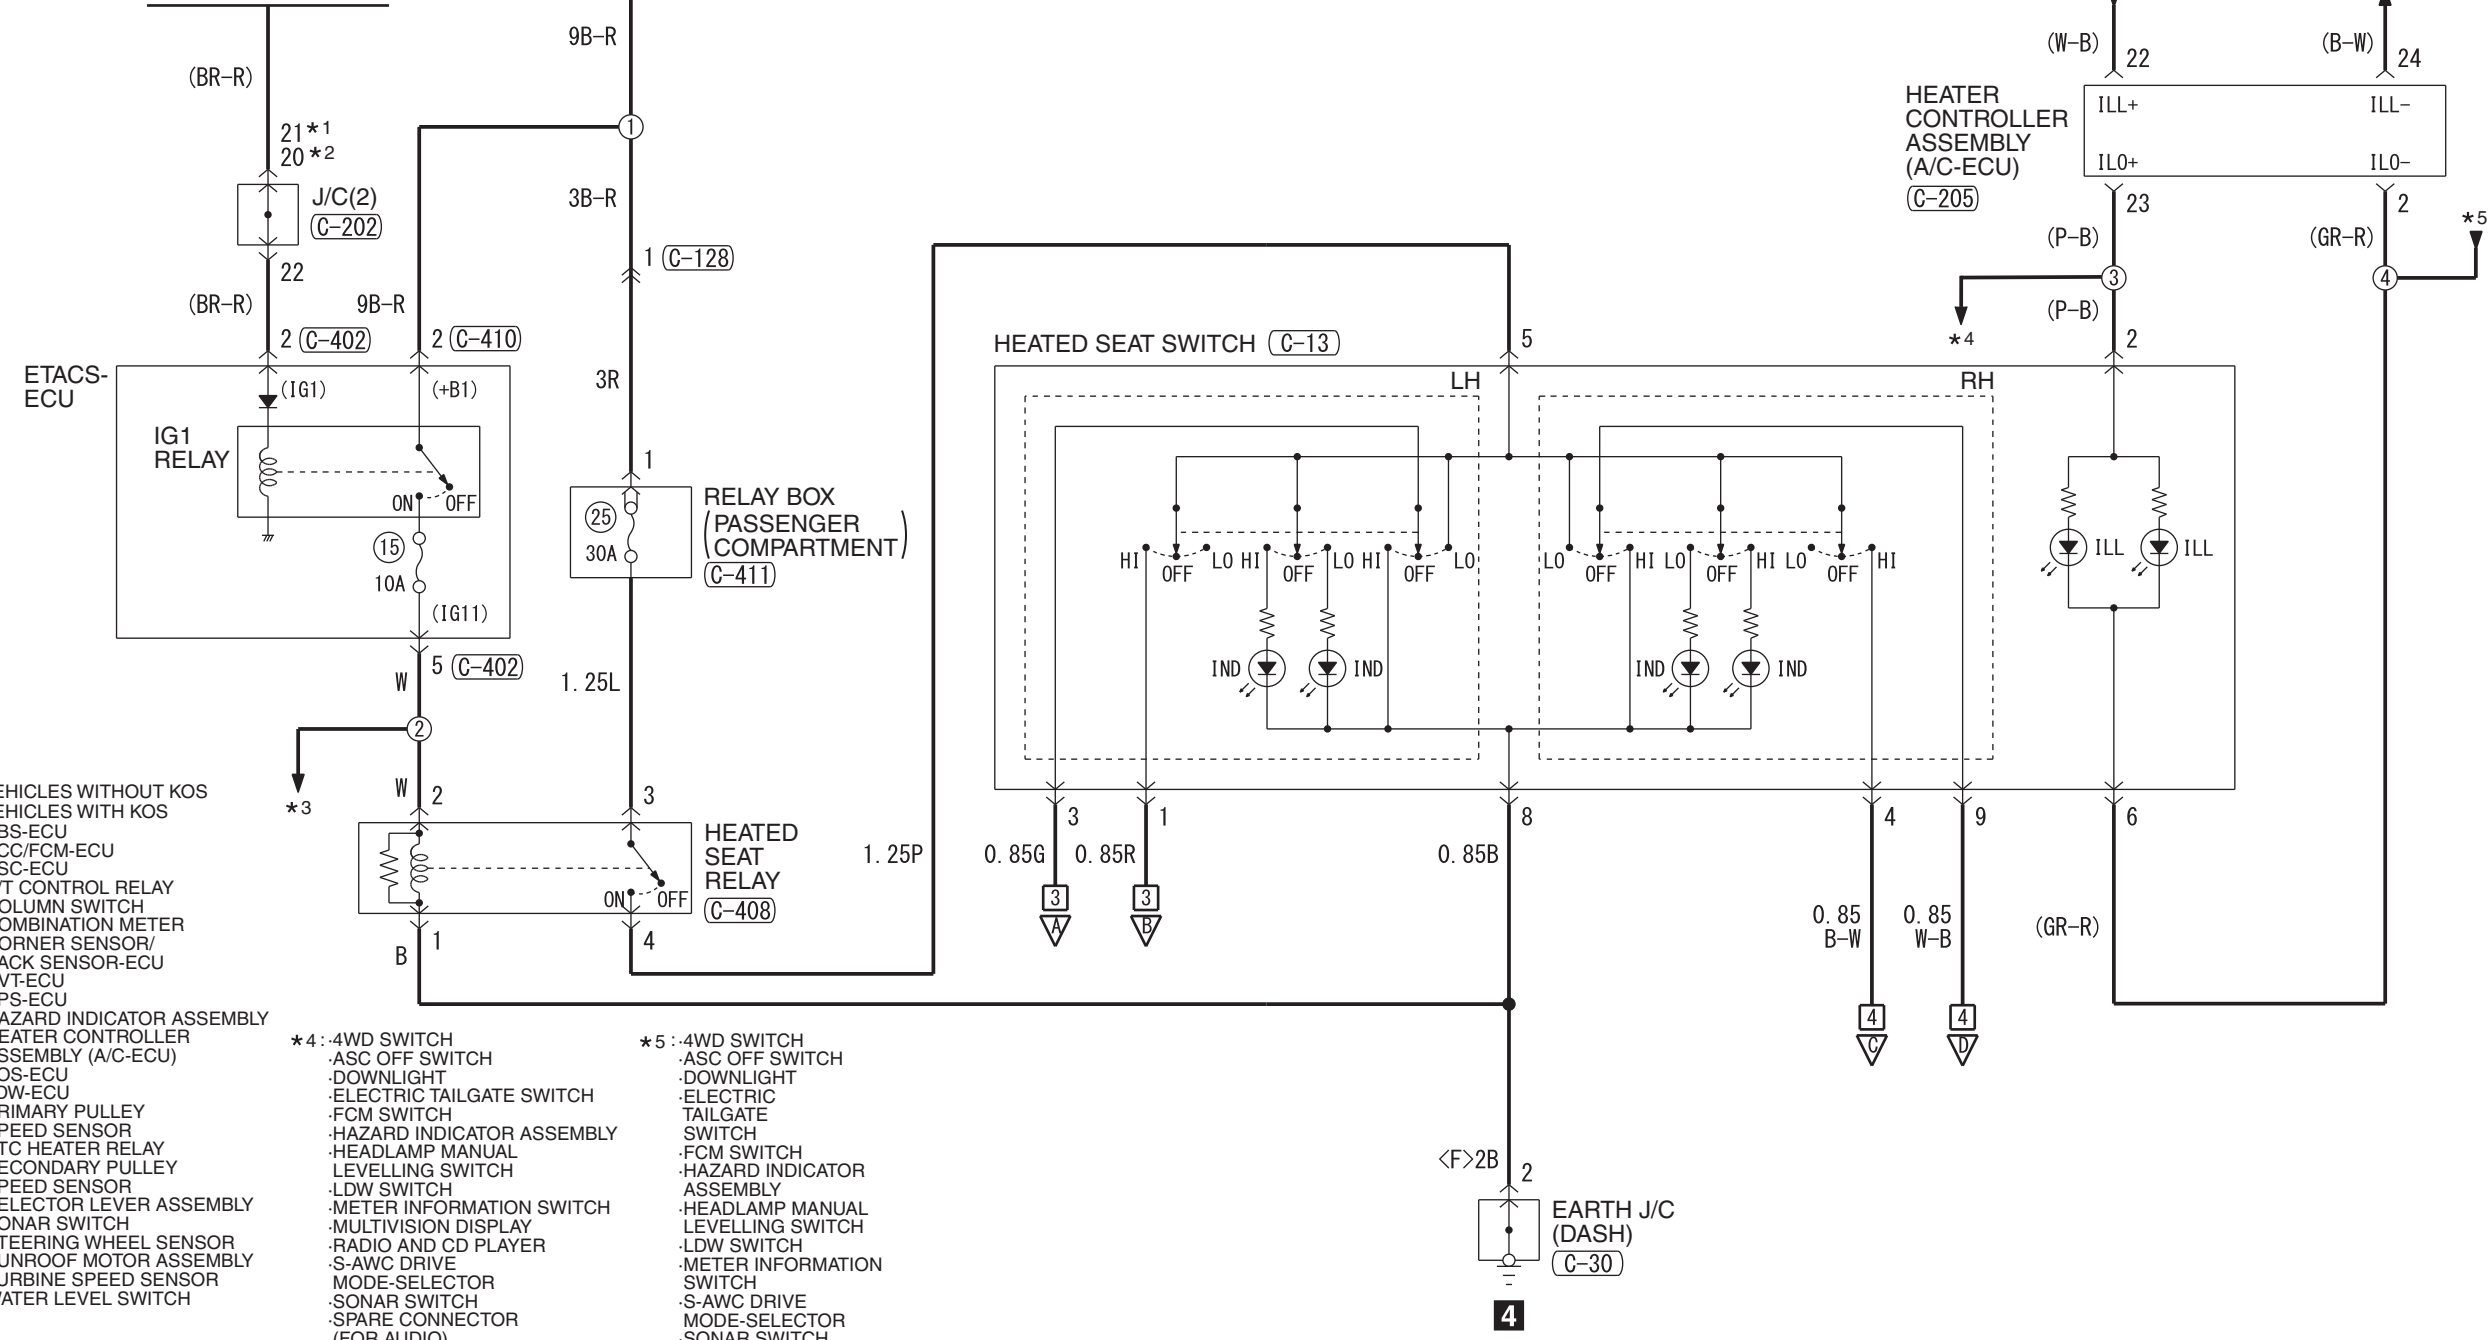

- NOTE
- *1 : VEHICLES WITHOUT KOS
 - *2 : VEHICLES WITH KOS
 - *3 : ABS-ECU
 - .ACC/FCM-ECU
 - .ASC-ECU
 - .A/T CONTROL RELAY
 - .COLUMN SWITCH
 - .COMBINATION METER
 - .CORNER SENSOR/BACK SENSOR-ECU
 - .CVT-ECU
 - .EPS-ECU
 - .HAZARD INDICATOR ASSEMBLY
 - .HEATER CONTROLLER ASSEMBLY (A/C-ECU)
 - .KOS-ECU
 - .LDW-ECU
 - .PRIMARY PULLEY
 - .SPEED SENSOR
 - .PTC HEATER RELAY
 - .SECONDARY PULLEY
 - .SPEED SENSOR
 - .SELECTOR LEVER ASSEMBLY
 - .SONAR SWITCH
 - .STEERING WHEEL SENSOR
 - .SUNROOF MOTOR ASSEMBLY
 - .TURBINE SPEED SENSOR
 - .WATER LEVEL SWITCH

- *4 : 4WD SWITCH
- .ASC OFF SWITCH
 - .DOWNLIGHT
 - .ELECTRIC TAILGATE SWITCH
 - .FCM SWITCH
 - .HAZARD INDICATOR ASSEMBLY
 - .HEADLAMP MANUAL LEVELLING SWITCH
 - .LDW SWITCH
 - .METER INFORMATION SWITCH
 - .MULTIVISION DISPLAY
 - .RADIO AND CD PLAYER
 - .S-AWC DRIVE
 - MODE-SELECTOR
 - .SONAR SWITCH
 - .SPARE CONNECTOR (FOR AUDIO)

- *5 : 4WD SWITCH
- .ASC OFF SWITCH
 - .DOWNLIGHT
 - .ELECTRIC TAILGATE SWITCH
 - .FCM SWITCH
 - .HAZARD INDICATOR ASSEMBLY
 - .HEADLAMP MANUAL LEVELLING SWITCH
 - .LDW SWITCH
 - .METER INFORMATION SWITCH
 - .S-AWC DRIVE
 - MODE-SELECTOR
 - .SONAR SWITCH

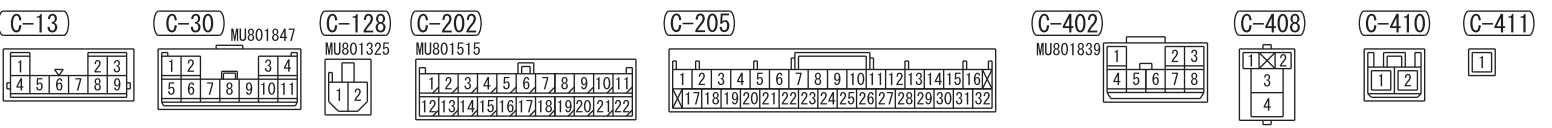

Wire colour code
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige