

 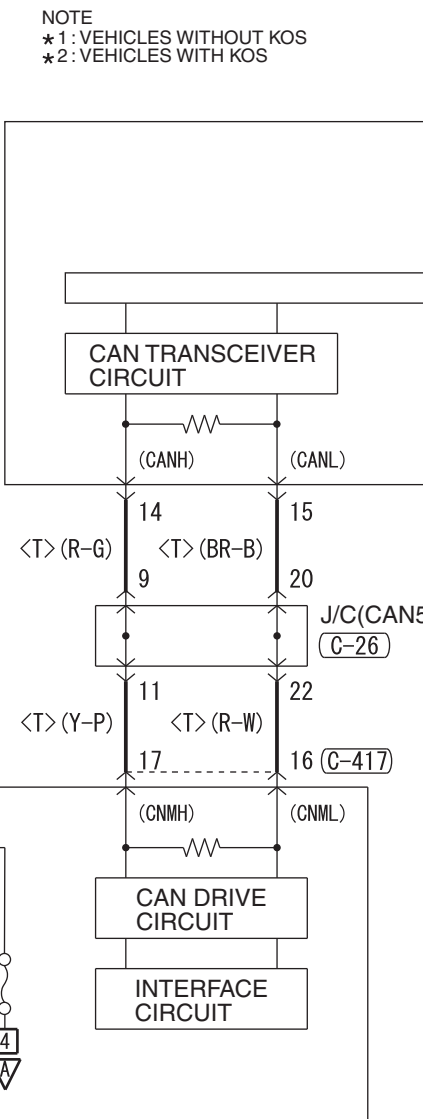


IGNITION SWITCH (IG1)
OR OSS-ECU (IG1)

 

FUSIBLE LINK (2) <4B1, 6B3>
FUSIBLE LINK (12) <4N1>

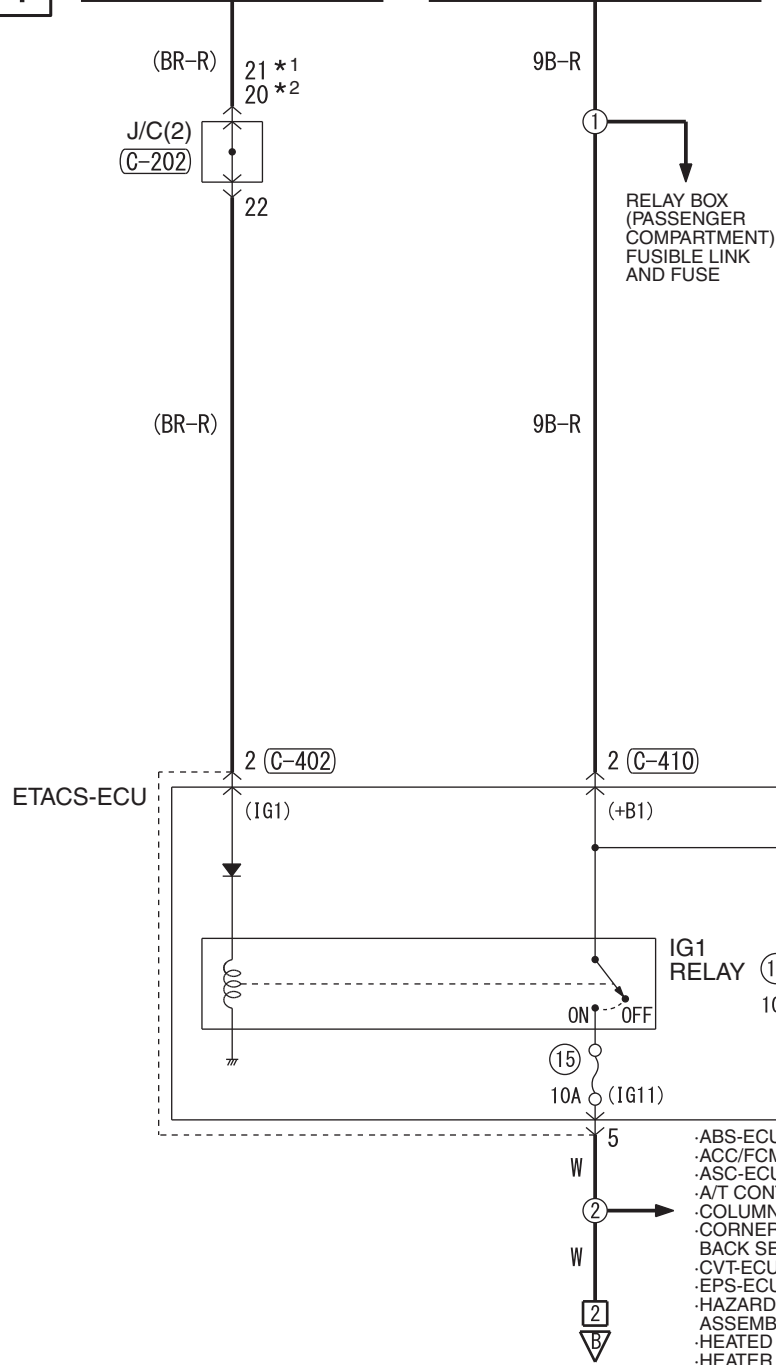

- ABS-ECU
- ACC/FCM-ECU
- ASC-ECU
- A/T CONTROL RELAY
- COLUMN SWITCH
- CORNER SENSOR/BACK SENSOR-ECU
- CVT-ECU
- EPS-ECU
- HAZARD INDICATOR ASSEMBLY
- HEATED SEAT RELAY
- HEATER CONTROLLER ASSEMBLY (A/C-ECU)
- KOS-ECU
- LDW-ECU
- PRIMARY PULLEY SPEED SENSOR
- PTC HEATER RELAY
- SECONDARY PULLEY SPEED SENSOR
- SELECTOR LEVER ASSEMBLY
- SONAR SWITCH
- STEERING WHEEL SENSOR ASSEMBLY
- SUNROOF MOTOR ASSEMBLY
- TURBINE SPEED SENSOR
- WATER LEVEL SWITCH



ETACS-ECU (FUSE 15)

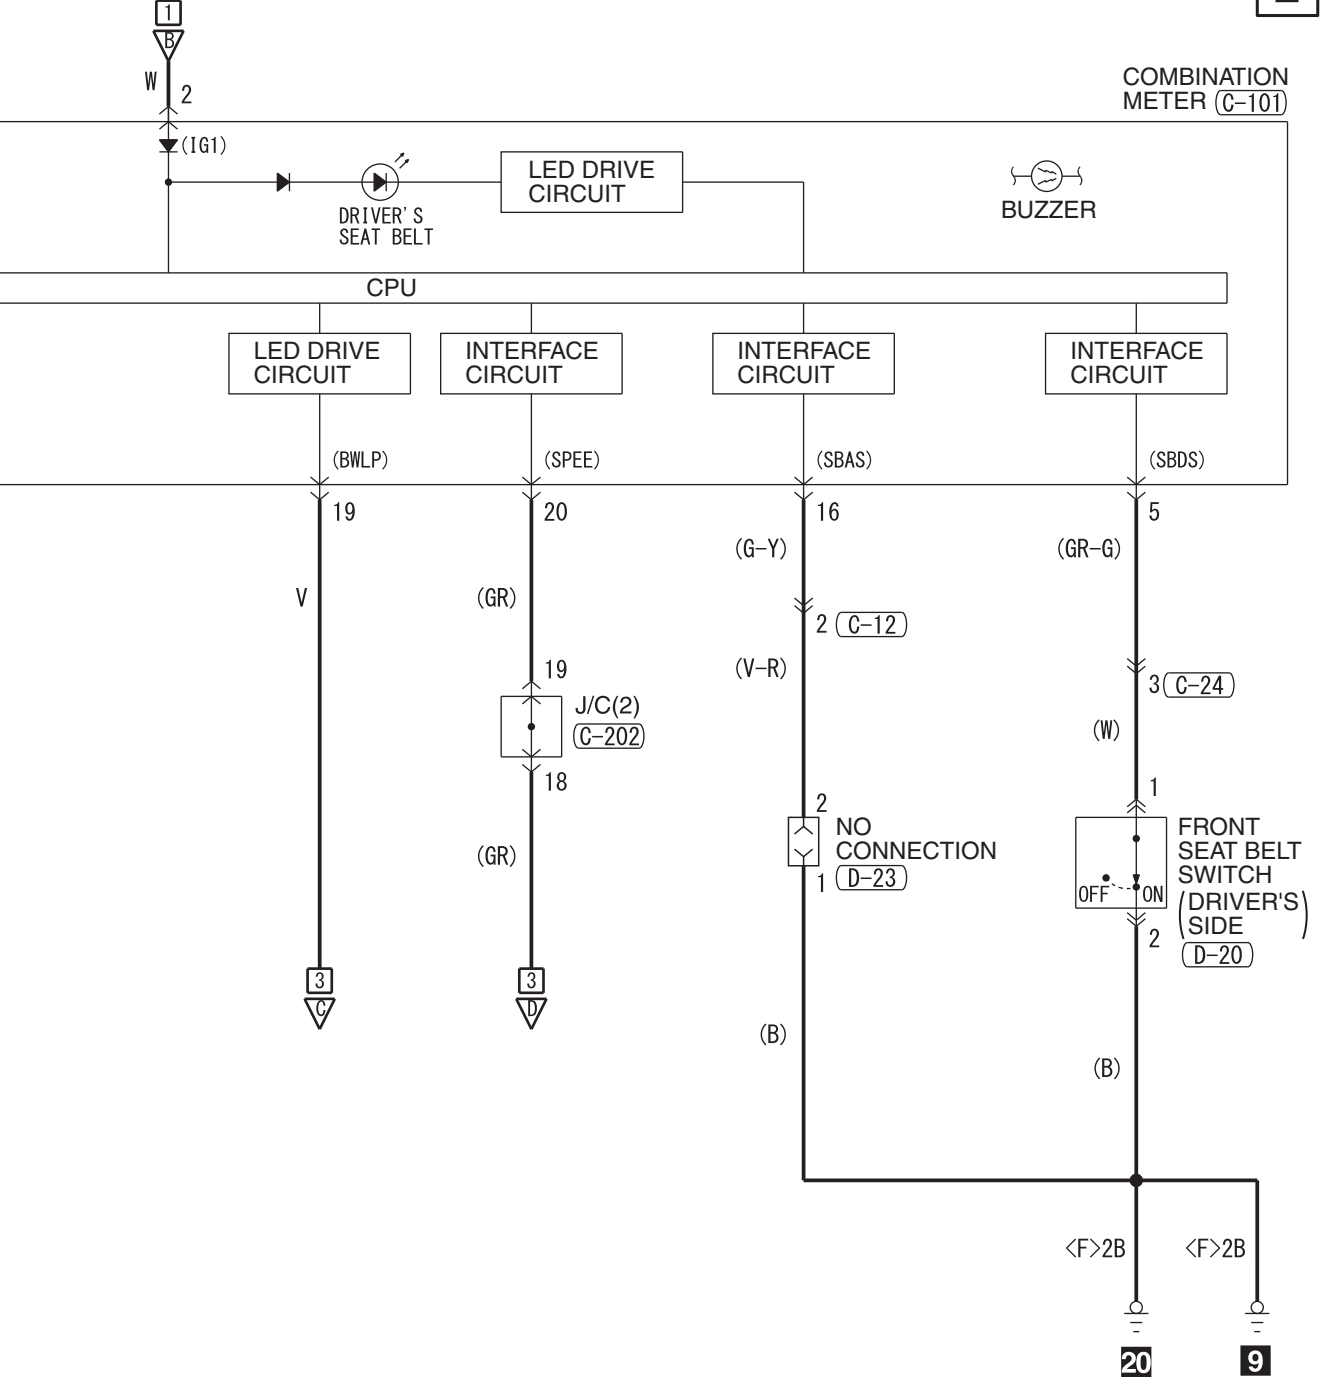

Wire colour code
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige