 


Right bank oxygen
sensor connector (front)

The diagram shows a detailed view of the engine compartment. A large, ribbed air filter is prominent in the center. Various hoses, wires, and engine components are visible. A line points from the text label to a connector on the right bank of the engine.

Right bank oxygen-
sensor (front)

A line points from this text label to the oxygen sensor itself, which is a threaded component with a ceramic tip, located on the right bank of the engine.



Equipment side
connector

AK602154AB