



<A/T>

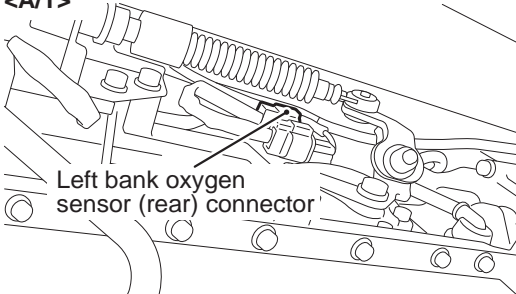

Left bank oxygen
sensor (rear) connector

This diagram shows a close-up of the rear connector for the left bank oxygen sensor. A coiled sensor cable is connected to a metal housing. A line points from the text label to the specific connector point on the housing.

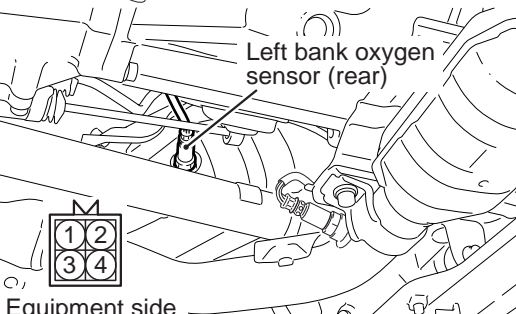

Left bank oxygen
sensor (rear)

This diagram shows the rear of the left bank oxygen sensor. A line points from the text label to the sensor's tip, which is positioned near the engine's exhaust manifold.



Equipment side
connector

AK603649 AB