


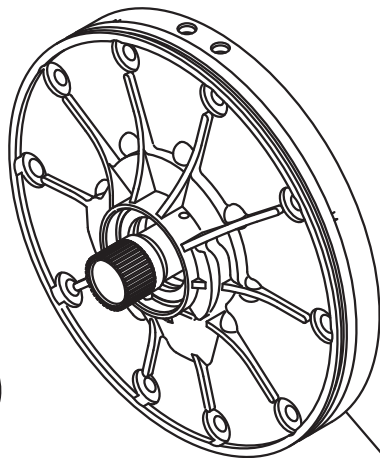

Apply automatic transmission fluid to all moving parts before installation.



4

