



Apply gear oil to
all moving parts
before installation.

