


6.0 ± 1.0 N·m

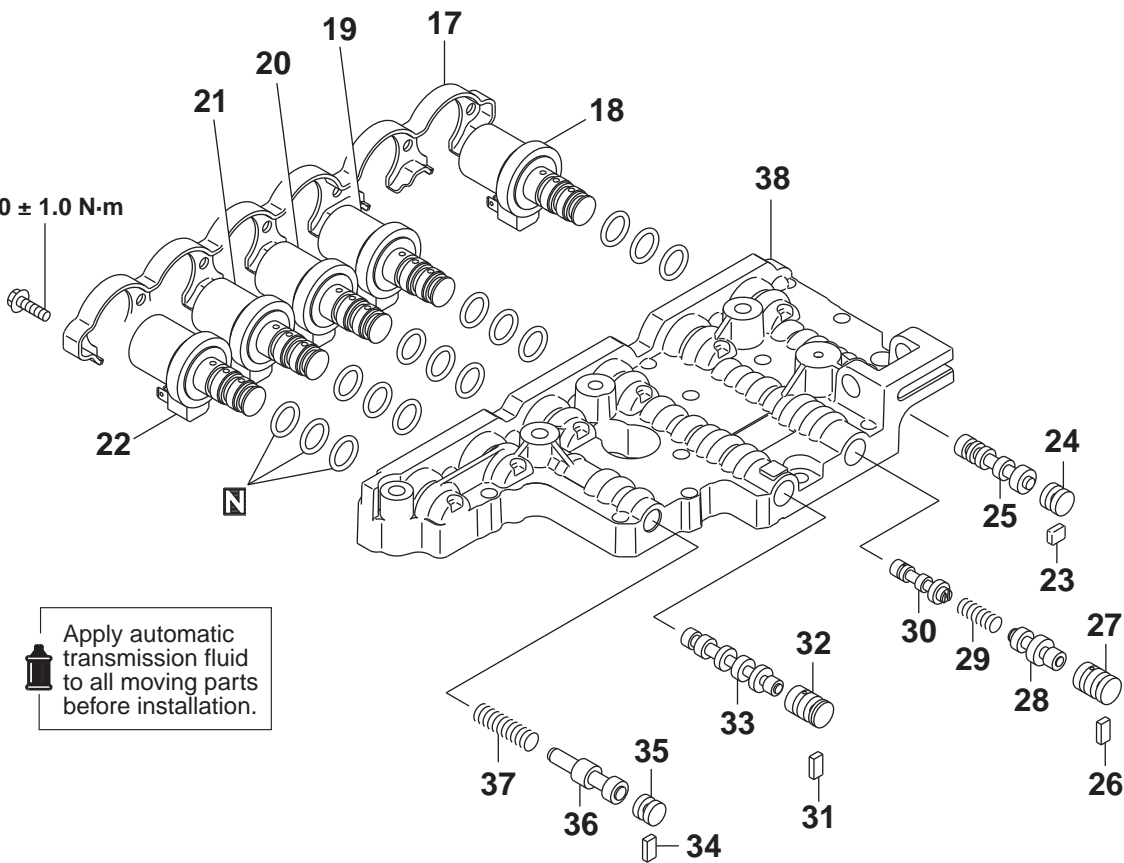

Apply automatic transmission fluid to all moving parts before installation.