

### Chassis No. /VIN Writing

Chassis No. /VIN (Engine ECU)

\*\*\*\*\*

Chassis No. /VIN currently written in Engine ECU displayed.  
Write the number displayed on the screen in Immobilizer KOS/ECU.

OK button

Press the OK button to execute.

