

Apply engine oil to all moving parts before installation.

<Cold engine>
11 ± 1 N·m

<Cold engine>
20 ± 1 N·m

<Cold engine>
20 ± 1 N·m

<Cold engine>
11 ± 1 N·m

