


<ul style="list-style-type: none"> ★1 Air flow sensor ★2 Intake air temperature sensor ★3 Throttle position sensor (main) ★4 Throttle position sensor (sub) ★5 Manifold absolute pressure sensor ★6 Camshaft position sensor ★7 Crank angle sensor ★8 Engine coolant temperature sensor ★9 Detonation sensor ★10 Oxygen sensor (front) ★11 Oxygen sensor (rear) 	<ul style="list-style-type: none"> ● Accelerator pedal position sensor (main) ● Accelerator pedal position sensor (sub) ● Alternator FR terminal ● Alternator L terminal ● Fin thermo sensor ● Blower switch ● Power steering fluid pressure switch ● Vehicle speed sensor ● Oil pressure switch ● Ignition switch-IG ● Ignition switch-ST ● Power supply ● CAN communication (input signal)
--	---

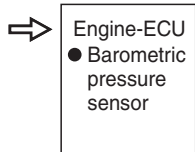

<ul style="list-style-type: none"> ★1 Injector ★2 Throttle valve control servo ★3 Purge control solenoid valve 	<ul style="list-style-type: none"> ● Ignition coil ● Engine control relay ● Fuel pump relay ● Starter relay ● Throttle valve control servo relay ● Alternator G terminal ● Oxygen sensor (front) heater ● Oxygen sensor(rear) heater ● A/C compressor relay ● A/C condenser fan relay ● CAN communication (output signal)
---	--

