



Apply new engine oil to the O-ring before installation.

