


- ★ 1 Air flow sensor
 - ★ 2 Crank angle sensor
 - ★ 3 Camshaft position sensor
 - ★ 4 Engine coolant temperature sensor
 - ★ 5 Rail pressure sensor
 - ★ 6 Intake air temperature sensor
 - ★ 7 EGR gas temperature sensor
 - ★ 8 Manifold absolute pressure sensor
 - ★ 9 Fuel temperature sensor
 - ★ 10 Throttle position sensor
 - ★ 11 EGR valve position sensor
 - ★ 12 No. 1 exhaust gas temperature sensor
 - ★ 13 No. 2 exhaust gas temperature sensor (catalyst temperature)
 - ★ 14 No. 3 exhaust gas temperature sensor (DPF temperature)
 - ★ 15 Exhaust differential pressure sensor
- Accelerator pedal position sensor (main)
 - Accelerator pedal position sensor (sub)
 - Power supply
 - Ignition switch-IG
 - Ignition switch-ST
 - Alternator L terminal
 - Alternator FR terminal
 - Battery temperature sensor
 - Battery current sensor
 - Glow diagnosis signal
 - Water level switch
 - Engine oil pressure switch
 - CAN communication (input signal)
 - Starter active signal switch
 - Fuel filter switch*
 - Transmission oil temperature sensor <M/T>
 - Clutch switch <M/T>

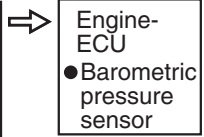

- ★ 1 Suction control valve
 - ★ 2 Throttle valve control servo (DC motor)
 - ★ 3 Injector
 - ★ 4 EGR valve (DC motor)
 - ★ 5 Variable geometry control solenoid valve
 - ★ 6 EGR cooler bypass control solenoid valve
 - ★ 7 Oil feeder control valve
- Engine control relay
 - A/C compressor relay
 - Starter relay
 - Glow control unit
 - Alternator G terminal
 - CAN communication (output signal)

NOTE:
*: Except vehicles for Australia and New Zealand

