

- ★1 Crank angle sensor
- ★2 Camshaft position sensor
- ★3 Engine coolant temperature sensor
- ★4 Rail pressure sensor
- ★5 Intake air temperature sensor
- ★6 Manifold absolute pressure sensor
- ★7 Fuel temperature sensor
- ★8 Throttle position sensor
- ★9 EGR valve position sensor

- Accelerator pedal position sensor (main)
- Accelerator pedal position sensor (sub)
- Power steering fluid pressure switch
- Power supply
- Ignition switch-IG
- Ignition switch-ST
- A/C switch
- CAN communication (input signal)

⇒ Engine-ECU
● Barometric pressure sensor

- ★ 1 Suction control valve
- ★ 2 Throttle valve control servo (DC motor)
- ★ 3 Injector
- ★ 4 EGR valve (DC motor)

- Engine control relay
- A/C relay
- Condenser fan relay
- Glow plug relay
- CAN communication (output signal)

